
HIGH PERFORMANCE GEOTEXTILE FOR SOIL STABILIZATION AND REINFORCEMENT

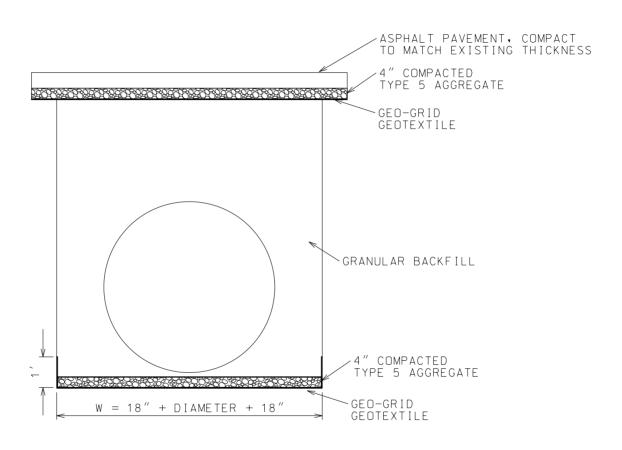

NOTES: High Performance Geotextile for Soil Slabilization and Reinforcement shall be placed at the bottom of the trench and on top of the granular backfill. Place geotextile in the areas specified in the drowing for the width of the powement. plus a minimum of 1 foot on each side for overlap. a 4 inch Type 5 aggregate base coorse shall be placed immediately on top of each geotextile layer. Then geotextile placed at the bottom of the trench shall extend to both flared end sections of the new crossroad pipe.